

Notes:



**PUBLIC III**

**Headset, wired**

**Operating and Installation  
Instructions**



**Clarson Apparatebau GmbH**

Zeppelinstr. 4 78083 Dauchingen

Postfach 11 63 78080 Dauchingen

Tel.: +49 7720 9956-0

Fax: +49 7720 9956-22

Email: [clarson@clarson.de](mailto:clarson@clarson.de)

Internet: <http://www.clarson.de>

## Installation of Components

- ① Link the microphone loudspeaker unit 40.054.301 (**jack 2**) with the central unit 40.054.311 (**HEADSET jack**) via patch cable.
- ② Connect the headset to **jack 1** of the microphone loudspeaker unit.


Headset, monaural  
Ref. 40.030.011



Headset, binaural  
Ref. 40.030.007



Microphone loudspeaker unit Ref. 40.054.301

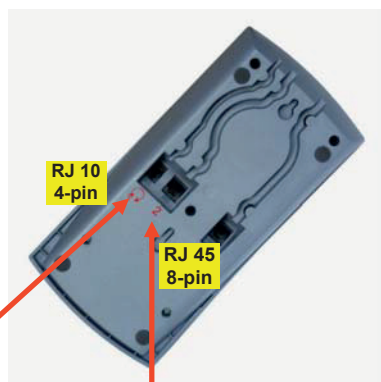

②

①

Central unit  
Ref. 40.054.311



HEADSET jack

Patch cable, 3 m  
with RJ45 connector (8/8-pin)  
Ref. 40.054.327



RJ 10  
4-pin



RJ 45  
8-pin

## Activation / Deactivation of HEADSET Interface

Service Side



Public Side



### Activate headset mode:

- Switch the system OFF (button ①)
- Push and hold **📞+** until **LED** above the button flashes **once**
- Switch the system ON (button ①)
- Headset mode is now activated
- Microphone and loudspeaker on service side are deactivated
- **LED** above button ① flashes (0,5 sec on - 0,5 sec off) indicating headset mode

### Deactivate headset mode / Back to standard mode:

- Switch the system OFF (button ①)
- Push and hold **📞+** until **LED** above the button flashes **once**
- Switch the system ON (button ①)
- System again in standard mode

or

Briefly disconnect the unit  
from the power supply

### Activate headset mode:

- Switch the system OFF (button ①)
- Push and hold **📞+** until **LED** above the button flashes **twice**
- Switch the system ON (button ①)
- Headset mode is now activated
- Microphone and loudspeaker on public side are deactivated
- **LED** above button ① flashes (1 sec on - 0,2 sec aus) indicating headset mode

### Deactivate headset mode / Back to standard mode:

- Switch the system OFF (button ①)
- Push and hold **📞+** until **LED** above the button flashes **twice**
- Switch the system ON (button ①)
- System again in standard mode

or

Briefly disconnect the unit  
from the power supply