

## Components



**Central unit** in aluminium enclosure  
W130 x H164 x D45 mm  
Operating voltage 12 - 17VDC  
Software version 7971002605F-79612505F  
E1 approval no. E1 - 10 R - 044454

Ref. no. 40.080.033



**Directional electret hand-held microphone** with support, pop-protected, with 45 cm spiral cable and Neutrik plug  
*type EM 135*  
sensitivity: -37dB +/-3dB (0dB=1V/Pa)  
impedance: 1,8kΩ

Ref. no. 40.005.042



**Electret hand-held microphone** PEIKER DD60/S with 2.3 m spiral cable C34 and Neutrik plug (pin assignment see ref. no. 40.080.096)  
sensitivity: -48dB +/- 3dB (0dB=1V/Pa)  
impedance: 2kΩ

Ref. no. 40.080.092



**Neutrik jack** for hand-held microphone, 2.3 m cable with crimped cable ends  
*Pin Assignment:*  
1 microphone mass 3 button PTT GND 26  
2 microphone signal 4 button PTT

Ref. no. 40.080.096



**Microphone support** HV7  
for ref. no. 40.080.092

Ref. no. 40.080.095



**Loom of wires** for central unit ref. no. 40.080.033  
various cable lengths

Ref. no. 40.080.097



**Omnidirectional electret microphone**, Ø 6mm, with shrink sleeve, various cable lengths  
*type EM 125* *type EM 158*  
sensitivity / impedance:  
-43dB +/-3dB (0dB=1V/Pa) -32dB +/-3dB  
1,6kΩ 1,6kΩ

Ref. no. 40.005.043  
*type EM 125*

Ref. no. 40.005.044  
*type EM 158*



**Omnidirectional electret microphone** in stainless steel capsule, Ø 8 mm, water resistant,  
*type EM 125* *type EM 158*  
sensitivity / impedance:  
-43dB +/- 3dB (0dB=1V/Pa) -32dB +/-3dB  
1,6kΩ 1,6kΩ

Ref. no. 40.005.045  
*type EM 125*

Ref. no. 40.005.046  
*type EM 158*



**Pressure chamber loudspeaker**, TL5, 6W / 8Ω, plastic housing, alu bracket, various cable lengths (outside the car)

Ref. Nr. 40.006.018

**Flush-mounted ceiling loudspeaker**, 6W / 8Ω, round, with mounting ring and perforated alu grill, Ø100 mm, black, various cable lengths (car interior)

Ref. Nr. 40.006.016



# CarCom Intercom System for Vehicles

## Technical Documentation Operating Instructions



Clarson Apparatebau GmbH • Zeppelinstraße 4 • D-78083 Dauchingen  
Tel. +49 (0)7720 / 9956 - 0 • Fax +49 (0)7720 / 9956 - 22  
E-mail: [clarson@clarson.de](mailto:clarson@clarson.de), <http://www.clarson.de>

**CarCom** - Intercom System for all kinds of vehicles enabling communication inside a vehicle as well as with a person outside.

## FEATURES

- ◆ Open duplex
- ◆ Press-to-talk with volume increase
- ◆ Siren
- ◆ Gong
- ◆ Communication between
  - Driver and passenger (VIP)
  - Driver and a person outside the vehicle
  - Passenger and a person outside the vehicle

## COMPONENTS

### Vehicle - interior

- Central unit
- Electret microphones
- Loudspeakers
- Various buttons

### Vehicle - exterior

Pressure chamber loudspeaker  
1 or 2 electret microphones  
f.ex. fixed to exterior mirrors

### Starting the system:

Tune the external potentiometer to the maximum or bridge over pins 24 and 26.

- Press button „communication front > exterior“, or hold down button (version 797101).  
Tune potentiometers „exterior volume“ and „front volume“ for desired exterior and interior volume.  
In case of „push to talk“ mode (potentiometer „balance“ < 6) hold down button „PTT“ to adjust the „exterior volume“. Tone colour can be modified by tuning potentiometers „treble“ and „bass“.
- Press button for „communication rear > front“  
Tune potentiometer „rear volume“ to reach desired rear volume.
- Press „call“ button  
Tune potentiometer „gong“ for desired volume.

The position of the potentiometer „balance“ affects front, exterior and rear volumes, depending on the operating mode. Together with the „PTT“ button the operating mode changes from open duplex to simplex.

- **Communication front** > < **exterior**  
Tune potentiometer „balance“ towards zero to decrease the exterior volume, press and hold the „PTT“ button to decrease front volume.
- **Communication rear** > < **front**  
Tune potentiometer „balance“ towards zero to decrease front volume, press and hold the „PTT“ button to decrease rear volume.

If the „balance“ potentiometer is turned to the ultimate right-hand position, volume can't be influenced by pressing the „PTT“ button.


### Operating Instructions:

The desired function is switched on or off by pressing the respective buttons.


The volume of a communication is adjusted via external potentiometer.

- *Communication from front to exterior*  
Press button „communication front > < exterior“, front LED is on.  
Version 797101  
Press button „communication front > < exterior“ or press and hold down button „PTT“.
- *Communication from rear to front*  
Press button „communication rear > < front“, front and rear LEDs are on.
- *Communication from rear to exterior*  
Press button „communication rear > < exterior“, rear LED is on.
- *Communication from exterior to front and rear*  
(listen)  
Press button „communication exterior > rear and front“, front and rear LEDs are flashing (500ms on - 1s off).
- *Switching on the gong*  
Press „call“ button, front and rear LEDs are on during the gong signal is heard, then they are flashing (500ms on - 500ms off).
- *Switching the siren on*  
Press button „siren“
- *Switching the siren off*  
Wait at least 2s, then press and hold down „siren“ or any other button till the siren is switched off.

## Pin Assignment

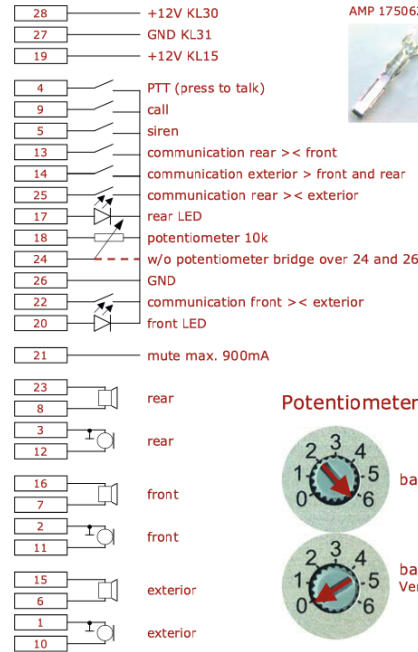

## AMP Multilock Connectors 040 Series

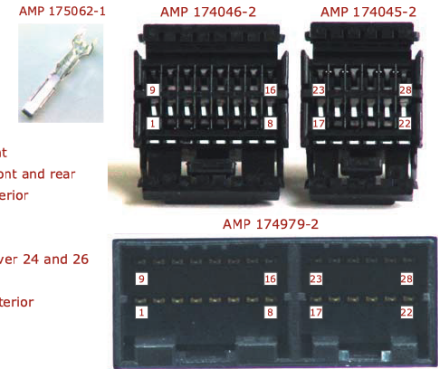

## Potentiometer set in factory



## Technical Data

## Central Unit

Operating voltage  
Frequency response  
Power consumption Standby  
Power consumption Standby Version 797101  
Output impedance front/exterior  
Loudspeaker impedance front/exterior  
Output impedance rear  
Loudspeaker impedance rear

12 -17 VDC  
150 - 12500 Hz  
6mA  
< 100mA  
max. 22W at 4Ω  
min. 4Ω  
max.5W at 8Ω  
min. 8Ω